

1


Connect the Manager flex to the network via Ethernet or PLC

The Manager flex is a Powerline (PLC) talent. Once connected to the router, it operates like a common powerline adapter.



How it works ...

To activate the powerline communication, press the Install button on the back of the Manager flex for 2 seconds.

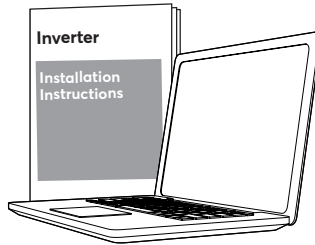

Supported inverters



2


Make necessary settings on the inverter

To ensure that the Manager flex properly reads out the inverter, the following inverter settings are important:



How it works ...

- Deactivate dynamic throttling
- Set data output format to tcp

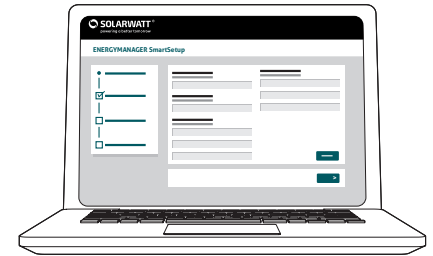

3

Set up the Manager flex via SmartSetup


The setup process ensures that every component around the system is correctly allocated so that the Manager flex can properly process all balances.



How it works ...

Setup access:
OS X, Linux:
<http://energymanager.local/>
Windows:
<http://energymanager/>

Interfaces

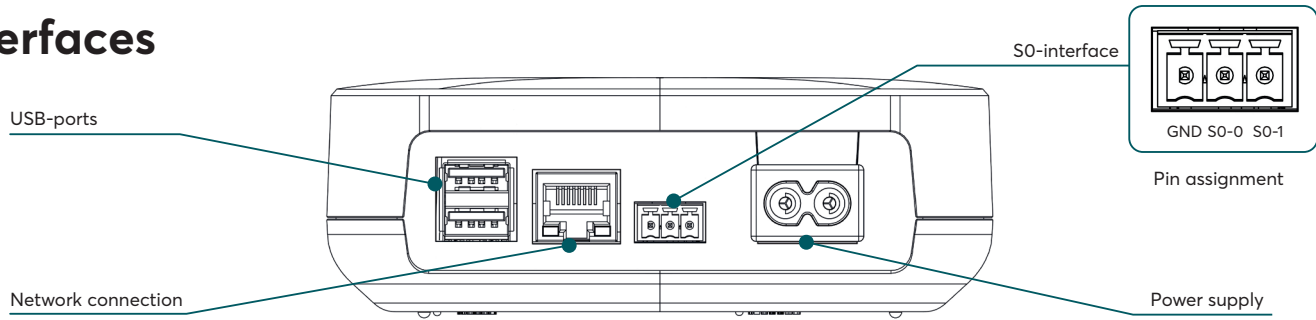

LED Codes

Status



in operation
booting successful



update



device error

Internet



full connection
established



router connection
established
portal connection
failed



router connection
failed

Connection



Storage connection
established



Storage connection
failed



powerline activated

Any problems setting up the Manager flex?

We have listed frequently occurring troubles in the Manager flex online help.

Just scan the QR Code to get to the help section.

